

## What to do if... (Troubleshooting)

If you have a problem, check the following before contacting your Lexus dealer.

### The doors cannot be locked, unlocked, opened or closed



#### You lose your keys

- If you lose your mechanical keys, new genuine mechanical keys can be made by your Lexus dealer. (→P. 102)
- If you lose your electronic keys, the risk of vehicle theft increases significantly. Contact your Lexus dealer immediately. (→P. 104)



#### The doors cannot be locked or unlocked

- Is the electronic key battery weak or depleted? (→P. 785)
- Is the engine switch in IGNITION ON mode?  
When locking the doors, turn the engine switch off. (→P. 201)
- Is the electronic key left inside the vehicle?  
When locking the doors, make sure that you have the electronic key on your person.
- The function may not operate properly due to the condition of the radio wave. (→P. 114)

**The rear door cannot be opened**

- Is the child-protector lock set?

The rear door cannot be opened from inside the vehicle when the lock is set. Open the rear door from outside and then unlock the child-protector lock. (→P. 125)

---

**The trunk lid is closed with the electronic key left inside**

- The function to prevent the electronic key from being left inside the trunk will operate and you can open the trunk as usual. Take the key out from the trunk. (→P. 107)

**If you think something is wrong****The engine does not start**

- Did you press the engine switch while firmly depressing the brake pedal? (→P. 200)
  - Is the shift lever in P? (→P. 202)
  - Is the electronic key anywhere detectable inside the vehicle? (→P. 109)
  - Is the steering wheel unlocked? (→P. 202)
  - Is the electronic key battery weak or depleted?  
In this case, the engine can be started in a temporary way.  
(→P. 836)
  - Is the battery discharged? (→P. 837)
- 

**The shift lever cannot be shifted from P even if you depress the brake pedal**

- Is the engine switch in IGNITION ON mode?  
If you cannot release the shift lever by depressing the brake pedal with the engine switch in IGNITION ON mode  
(→P. 831)
- 

**The steering wheel cannot be turned after the engine is stopped**

- It is locked automatically to prevent theft of the vehicle.  
(→P. 202)

**The windows do not open or close by operating the power window switches**

- Is the window lock switch pressed?

The power window except for the one at the driver's seat cannot be operated if the window lock switch is pressed. (→P. 173)

---

**The engine switch is turned off automatically**

- The auto power off function will be operated if the vehicle is left in ACCESSORY mode for a period of time. (→P. 202)
- 

**A warning buzzer sounds during driving**

- The seat belt reminder light is flashing

Are the driver and the front passenger wearing the seat belts? (→P. 809)

- The parking brake indicator is on

Is the parking brake released? (→P. 219)

Depending on the situation, other types of warning buzzer may also sound. (→P. 806, 816)

**An alarm is activated and the horn sounds**

- Did anyone inside the vehicle open a door during setting the alarm?

The sensor detects it and the alarm sounds. (→P. 79)

Do one of the following to stop the alarms:

- Unlock the doors or open the trunk.
  - Turn the engine switch to ACCESSORY or IGNITION ON mode, or start the engine.
- 

**A warning buzzer sounds when leaving the vehicle**

- Is the message displayed on the multi-information display?

Check the message on the multi-information display.

(→P. 816)

---

**A warning light turns on or a warning message is displayed**

- When a warning light turns on or a warning message is displayed, refer to P. 806, 816.

**When a problem has occurred****If you have a flat tire**

- Stop the vehicle in a safe place and replace the flat tire with the spare tire. (→P. 819)
- 

**The vehicle becomes stuck**

- Try the procedure for when the vehicle becomes stuck in mud, dirt, or snow. (→P. 843)